

THE  **RD**



Oven-grill

Midi Prima

130-700-720 Series

Installation Manual

for use in GB, FR, DE, NL, ES, IT, SI,
SE, NO, DK, PT, FI, AT, CH, IE, BE, LU

EN

Original Installation Manual

Contents

1	Introduction.....	2
2	Symbols.....	2
3	Regulations and standards.....	3
4	Serviceability.....	4
5	Before installation.....	4
6	Position and placement.....	4
7	Connecting gas.....	7
8	Connecting electricity.....	8
9	After installation.....	8
10	Technical specifications.....	8
11	Servicing.....	9
12	Questions / customer service.....	10

1. Introduction

This is the installation manual for the Thetford SOP130, SOP700 and SOP720 series oven-grill and SGR700 series grill. The manual is meant for qualified installers who will install the oven-grill in a caravan, camper, boat or holiday home. Read the information and instructions carefully and follow them strictly to install the oven-grill safely and correctly.

Also read the warnings in the user manual before testing the oven-grill after installation.

Our policy is one of continuous development and improvement. Specifications and illustrations may change subsequent to publication.



If the appliance is not installed in accordance with national and European regulations, rules and standards this will void the warranty and may lead to criminal prosecution.

2. Symbols

Key to symbols:



Warning. Risk of injury and/or damage.



Attention. Important information.



Note. Additional information.

3. Regulations and standards

EN



Do not modify this appliance, unless the modification is authorised and carried out by the manufacturer or their agent.



Use only genuine and approved parts and materials.



Wear the correct Personal Protective Equipment during the installation. Also follow the applicable safety regulations.



Gas and electrical appliances should only be installed by qualified and certified professionals.



Ensure that the type of gas and pressure match the specification of the appliance. You can find the specification on the data badge.



Pay close attention to current regulations on ventilation in the country of use. The installation must provide for adequate air supply for combustion to the burners, safe removal of combustion products and avoidance of accumulation of unburned gases.



If it is not possible to install the appliance in accordance with these instructions, please refer to Thetford for further guidance.



For more information about ventilation regulations and requirements, see Position and placement.

4. Serviceability

The installer of Thetford products is responsible for proper installation to ensure the correct functionality and serviceability of the appliance. In terms of serviceability, this means that a dealer or an authorised Thetford service partner must be able to de-install and re-install the Thetford products within the time that is allowed according to the Thetford time-list, using standard tools and equipment.

This is to claim any warranty during the period of 3 years after purchase date. The serviceability of the product is also included in the audit. In case of any queries on this subject, please contact the Thetford local service representative before installing the product.

5. Before installation

Check the contents of the box:

- SOP130, SOP700 or SOP720 series oven-grill or SGR700 series grill
- Grill pan
- Oven shelf (not for SGR700 series)
- User manual
- Installation manual





If something is missing from the box, please contact your dealer.

6. Position and placement


- Remove all packaging materials from the appliance.
- Check the opening where the appliance will be installed. The location must provide:
 - Wood cabinetry
 - Support for weight of at least 30kg (for the oven-grill and items placed inside)
 - Grounded electrical outlet
 - Minimum installation clearances for installation location (see images below)
- Mount the wood battens to both sides of the cabinet.
- Slide the appliance all the way into the opening.

SOP700/SOP720/SGR700

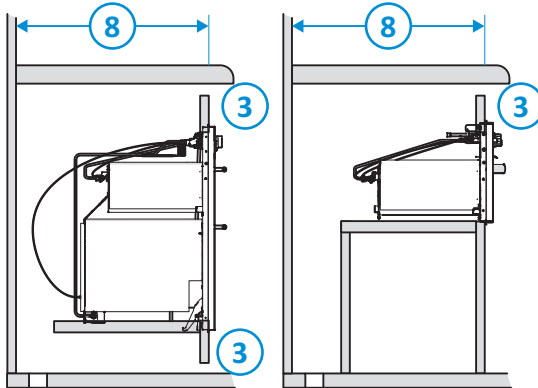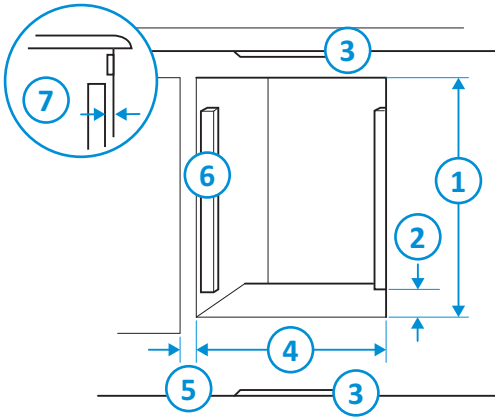


1. SOP700:
856mm with pan storage
drawer
726mm with storage drawer
656mm standard appliance
SOP720: 736mm
SGR700: 298mm
2. 40mm
3. Ventilation slot:
≥10x200mm
SGR700: ≥5x200mm
4. SOP700: 445-447mm
SOP720: 496-498mm
SGR700: 445-447mm
5. Min. 10 mm to a cabinet door
6. Wood batten to be fitted to
both sides of the cabinet
SOP700: 15x40x450mm
(650 mm with pan storage
drawer)
SOP720: N/A
SGR700: 15x40x130mm
7. 17mm
8. 490mm

EN

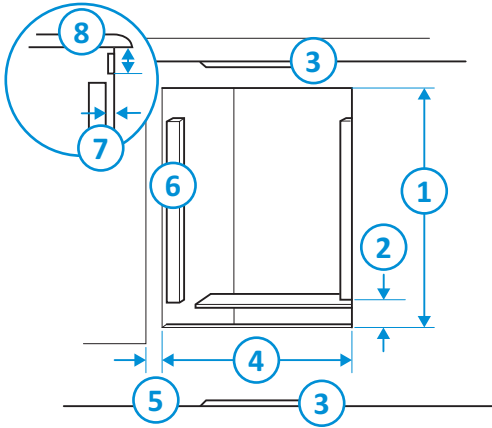

1. 642.5mm
2. 34mm
3. Ventilation slot:
≥10x200mm
4. 502-504mm
5. Min. 10 mm to a cabinet door
6. Wood batten to be fitted to
both sides of the cabinet
max 25x18x544mm
7. 6mm
8. 75mm beneath worktop
9. 490mm
10. 260mm
11. 140x18x(502-504)mm

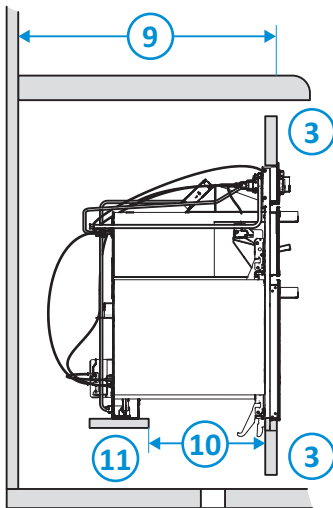

The appliance must be positioned free from draughts, which may effect the combustion. It must also be positioned in a manner that will prevent the accumulation of unburnt gas.



This appliance may be installed in a kitchen/kitchen diner but not in a room containing a bath or a shower. LPG appliances must not be fitted below ground level e.g. in a basement.



Follow the minimum dimensions shown in this manual. Any deviation could result in excessive temperature rise. If the minimum dimensions must be reduced, due to design constraints, a temperature rise test of all furniture fitted around the appliance must be performed. Where the minimum dimensions are reduced, it is recommended to install non-combustible material.



The surrounding surfaces must be able to withstand the allowable temperature rise of 65°C above ambient temperature, as specified in the EN30-1-1 standard and in accordance with the design of this unit.




All combustible materials such as curtains and shelves must be kept well clear of the appliance.



The temperature of the surrounding surfaces may rise if there are other additional devices besides the appliance. Check the allowable temperature of the materials used for the surrounding surfaces to ensure that they meet the requirements of EN30-1-1, EN1949, EN1645-1, EN1646-1, EN1647 and EN721.

- Fix the appliance in place using the fixing screw positions located on either side of the front trim [2 in the grill opening, 2 in the oven opening and 2 at base of oven opening]. Make sure the appliance is located correctly in the aperture prior to final fixing.

EN

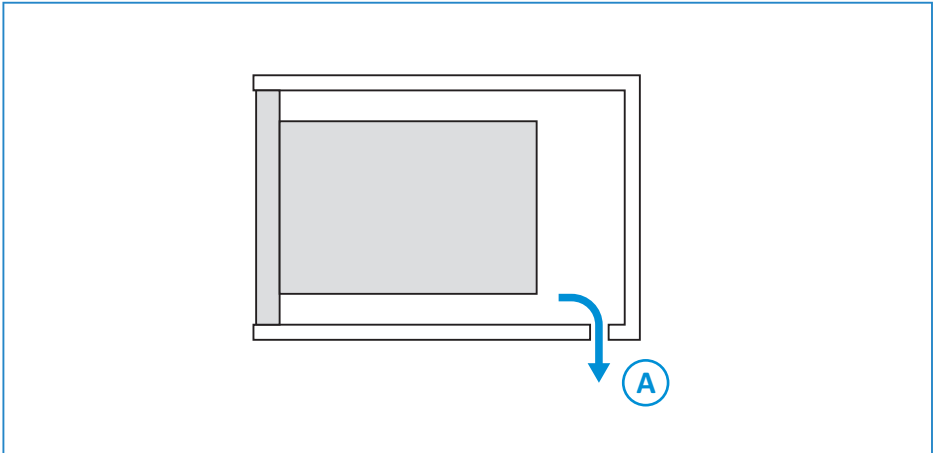

To ensure correct operation the installation must allow for free exchange of air between the enclosure and the living environment.



Design constraints may dictate additional venting at the front of the installation.



Maintain provision for the dispersal of unburnt gas beneath the appliance. Ensure any gas dispersal hole [A], is located away from the oven burner.



To ensure correct operation and prevent changes in air pressure affecting appliance performance, the appliance must be built into a securely fixed self-contained cabinet which is not connected to externally vented chambers in adjacent furniture, other than the gas dispersal hole described above.

7. Connecting gas

- Connect the gas to the 08mm gas inlet.
- Use only metal gas pipes in accordance with the requirements of EN1949. Please contact your dealer for more information.



Never use rubber tubing.



The burners have a fixed air/fuel mixture. When using propane, the flames burn quietly with a blue-green colour and no yellow at the tip. With butane, the flames have yellow tips. The yellow colour of the flames increases slightly as the burner heats up.

8. Connecting electricity

- For models connected to a battery: Connect the spark ignition cables to a 12V DC battery using appropriate connectors.
- For models connected to the mains supply: Connect the power cord to a suitable mains supply. The plug and socket must be accessible after installation.



This appliance must be earthed.



Ensure that all electrical cables are routed directly away and well clear of this appliance and other heat sources.

9. After installation

- Ensure that all packaging materials have been removed.
- Fix a warning label next to the unit that meets the requirements of EN721, Annex A.
- Fix a warning notice next to the gas dispersal hole, with the text: Warning! Under no circumstances should the gas dispersal hole be obstructed.
- Test all gas piping and connections and make sure they do not leak.
- Check the pressure of the gas when all connected gas appliances are in use simultaneously. The gas pressure may not rise or fall by more than 2.5mbar relative to the nominal value.

10. Technical specifications

Table 1: Burner specifications










	SOP130 series			SOP700 & SOP720 series			SGR700 series		
	Gas input		Inject- or	Gas input		Inject- or	Gas input		Inject- or
									
	kW	g/hr	mm	kW	g/hr	mm	kW	g/hr	mm
Oven burner	1.6	115	0.59	1.6	115	0.59			
Grill burner	1.6	115	0.62	1.5	108	0.62	1.5	108	0.62
Total	3.2	230		3.1	223		1.5	108	

Table 2: Dimensions and weight

Dimensions	SOP700 series with storage			SOP700 series standard			SOP720 series		
	H	W	D	H	W	D	H	W	D
mm	844	444	450	644	444	450	726	500	495
Appliance weight	19.5kg			18kg			22kg		
Oven volume	36L			36L			36L		
Spark ignition	12V DC			12V DC			240V/50Hz		

EN

Dimensions	SOP130 series			SGR700 series		
	H	W	D	H	W	D
mm	639	495	450	283	444	450
Appliance weight	17kg			6.2kg		
Oven volume	37L					
Spark ignition	12V DC			12V DC		
Cooling fan	12V DC/150mA/1.8W					

Table 3: Gas category

Class 3 Appliance	
CAT I ₃ + {28-30/37}	CAT I ₃ B/P {30}
BUTANE {G30} 28 – 30mbar	BUTANE {G30} 30mbar
PROPANE {G31} 37mbar	PROPANE {G31} 30mbar




Use only the type of gas and the pressures specified.

11. Servicing

All servicing must be carried out by an approved competent person. Before any service work is started, the appliance should have been left to cool and be disconnected from both the gas and electrical supplies. After each service the appliance must be checked for gas soundness and electrical safety.

For service, please contact your authorised local Service Centre giving details of the model and serial number on the data badge plus date of purchase.

Model Name & Series Number				
G30 G31	CAT I ₃ +(28-30/37) BUTANE 28-30mbar PROPANE 37mbar	CAT I ₃ B/P(30) BUTANE 30mbar PROPANE 37mbar	THETFORD	
ΣQn	Power kW (g/hr)	Model Number	Spark Ignition	
CE	Pin Number	Serial Number	Voltage ~ 50 Hz	
	Country Codes 1	Country Codes 2	Power kW	
			QC Pass	Order No

12. Questions / customer service

- Visit www.thetford-europe.com.
- Contact Customer Service Thetford in your country. See the addresses on the back.

EUROPEAN HEADQUARTERS

Thetford B.V.
Nijverheidsweg 29
P.O. Box 169
4870 AD Etten-Leur
The Netherlands

T +31 76 504 22 00
F +31 76 504 23 00
E info@thetford.eu

UNITED KINGDOM

Thetford Ltd.
Unit 6
Brookfields Way
Manvers, Rotherham
S63 5DL, England
United Kingdom

T +44 844 997 1960
F +44 844 997 1961
E info@thetford.eu

GERMANY

Thetford GmbH
Schallbruch 14
D-42781 Haan
Deutschland

T +49 2129 94250
F +49 2129 942525
E infod@thetford.eu

FRANCE

Thetford S.A.R.L.
Parc BUROPLUS / Bâtiment 6
18, Boulevard de la Paix
95800 CERGY
France

T +33 1 30 37 58 23
F +33 1 30 37 97 67
E info@thetford.eu

ITALY

Thetford Italy c/o Tecma s.r.l.
Via Flaminia
Loc. Castel delle Formiche
05030 Otricoli (TR)
Italia

T +39 0744 709071
F +39 0744 719833
E info@thetford.eu

SPAIN AND PORTUGAL

Mercè Grau Solà
Agente para España y Portugal
c/ Castellet, 36 bxs 2º
08800 Vilanova i la Geltrú
Barcelona
España

T +34 938 154 389
F not available
E infosp@thetford.eu

SCANDINAVIA

Thetford B.V.
Representative Office Scandinavia
Hantverkaregatan 32D
521 61 Stenstorp
Sverige

T +46 31 336 35 80
F +46 31 44 85 70
E infos@thetford.eu

AUSTRALIA

Thetford Australia Pty. Ltd.
41 Lara Way
Campbellfield VIC 3061
Australia

T +61 3 9358 0700
F +61 3 9357 7060
E infoau@thetford.eu
www.thetford.com.au

CHINA

Thetford China
Rm. 1207, Coastal Building
(East Block)
Haide 3rd Road, Nanshan District
Shenzen, 518054
China

T +86 755 8627 1393
F +86 755 8627 1673
E info@thetford.cn
www.thetford.cn