



Morco D61E

External Components

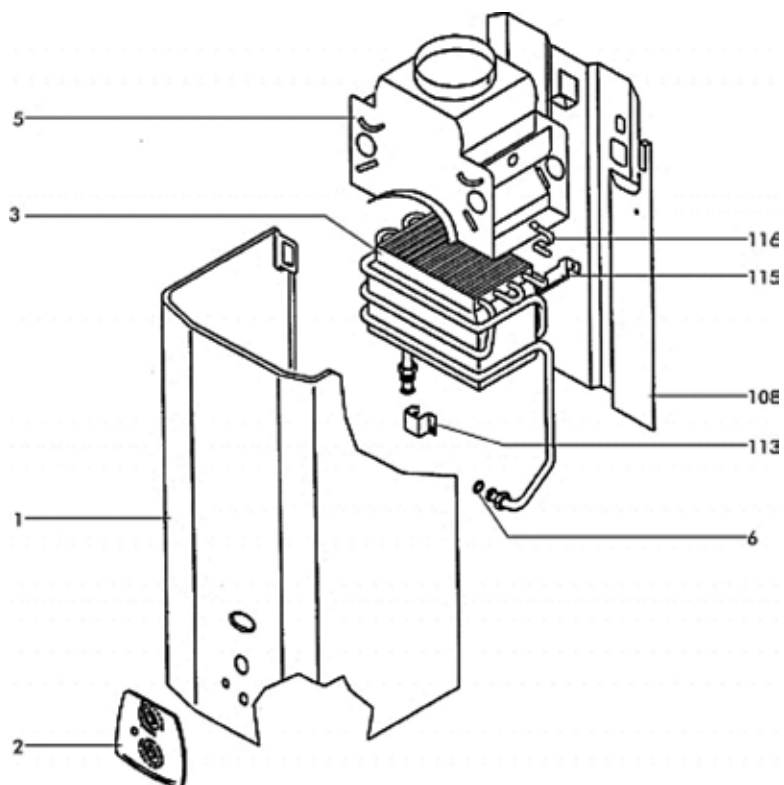


- 1 D61E Front Cover
- 2 Bezel D61E
- 3 D61B/E Heat Exchanger
- 5 Diverter Hood D61B & D61E
- 6 HEAT EXCHANGER WASHER 10PK
- 108 D61B/E Base
- 113 Fixing Clamp
- 116 Heat Exchanger Spring Clip


Morco D61E Gas Assembly

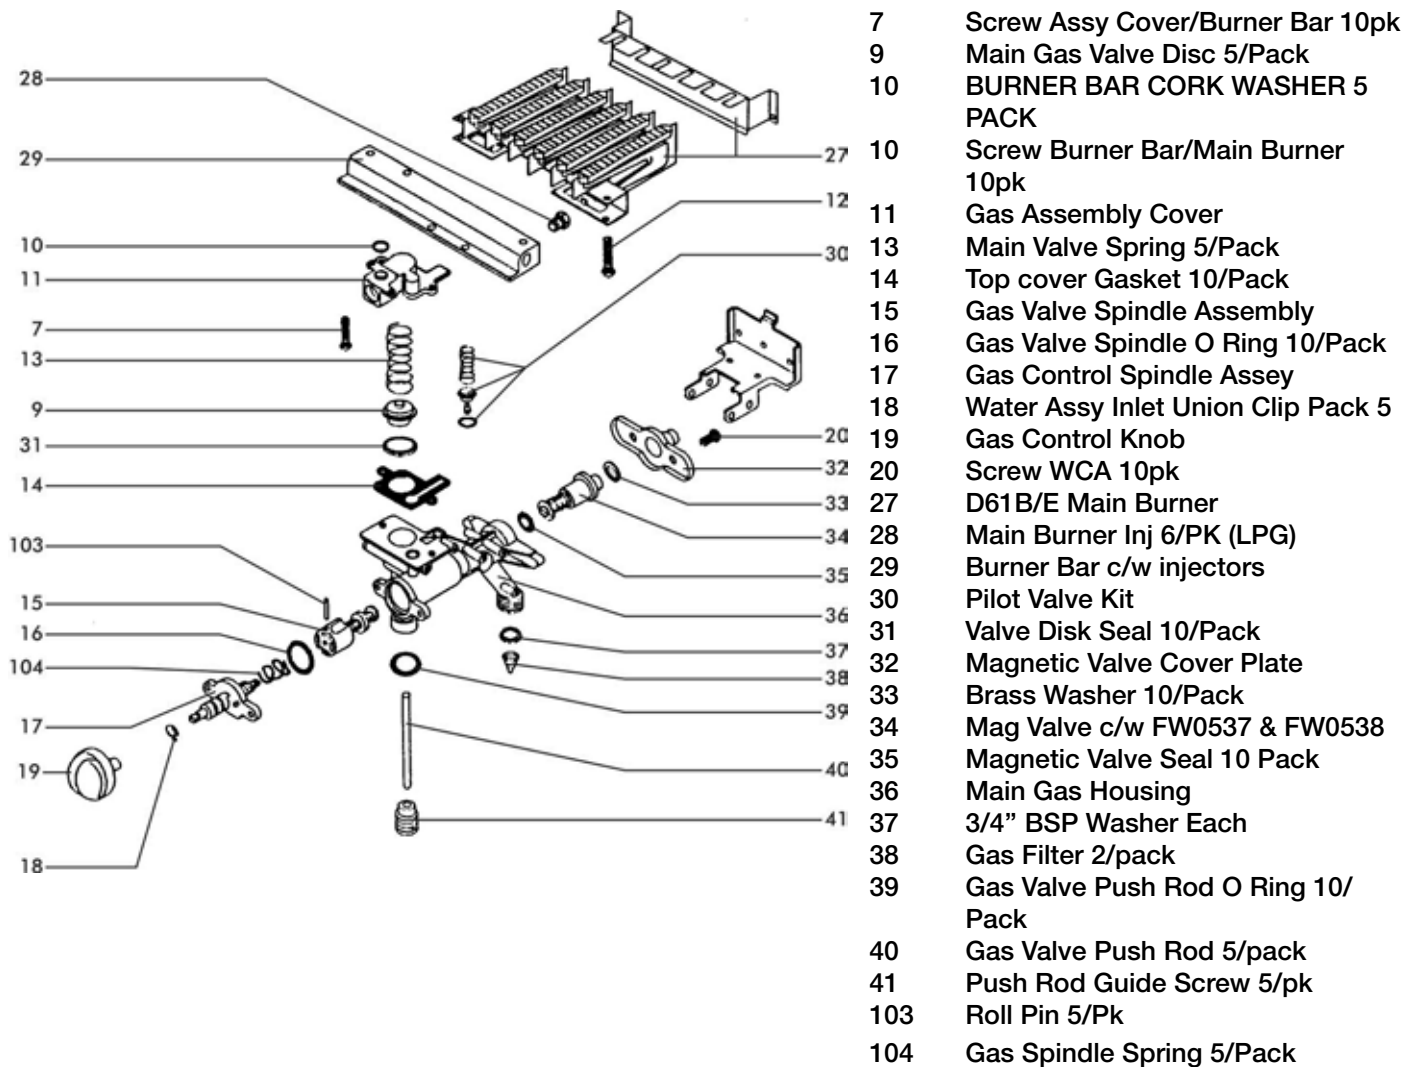

Morco D61E Water Control Assembly

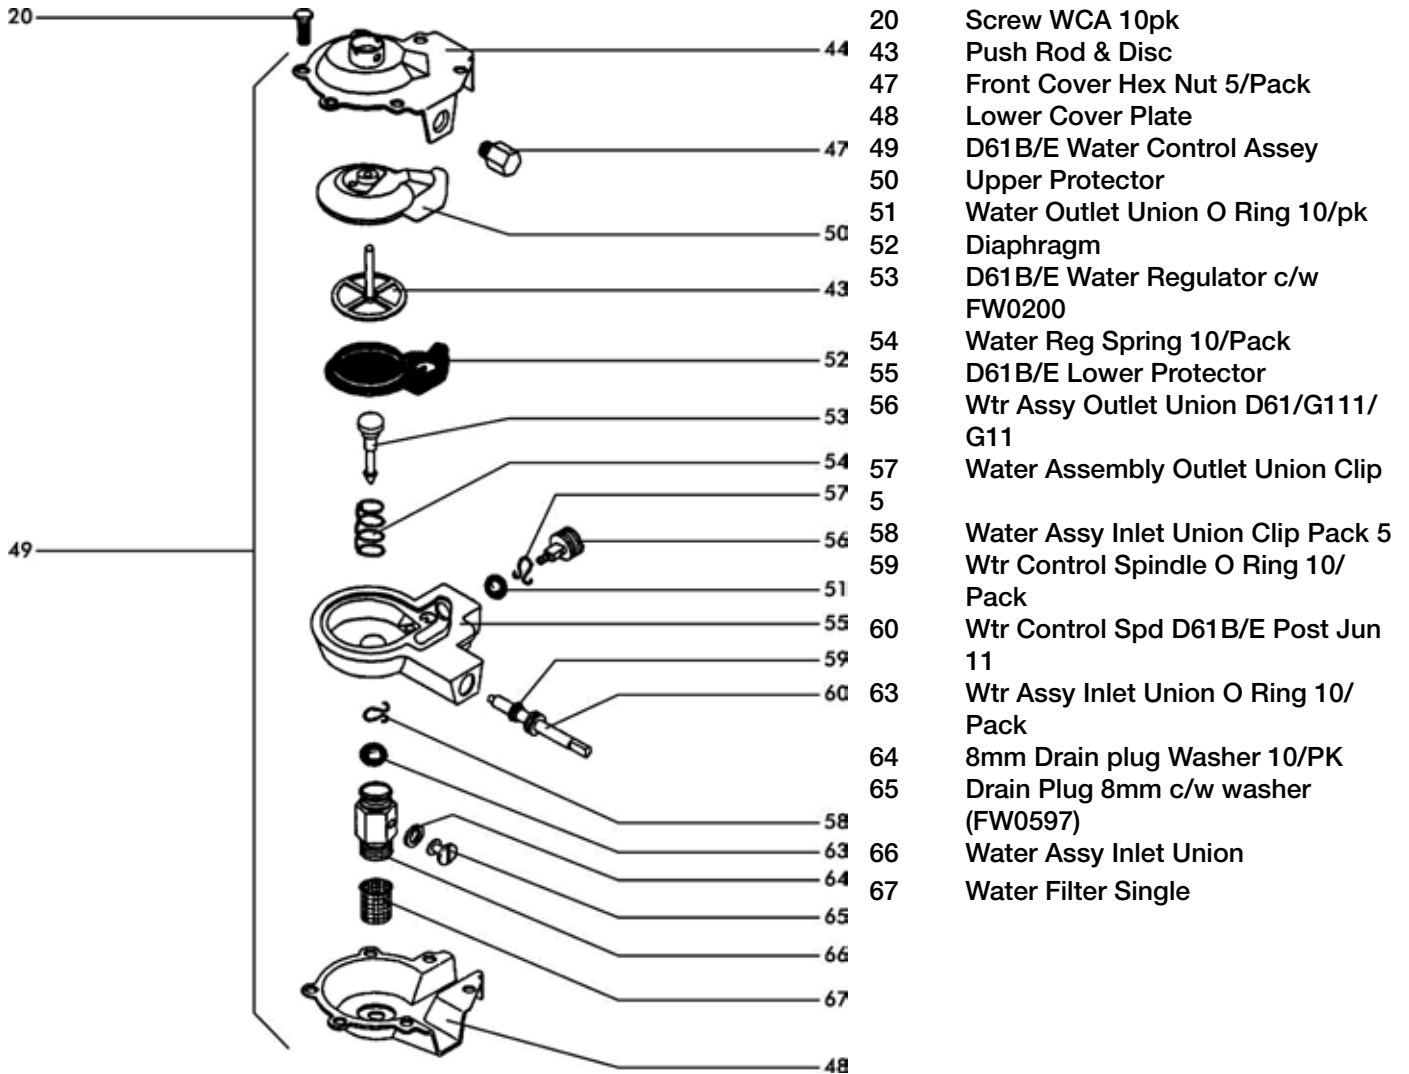


Morco D61E Pilot Assembly

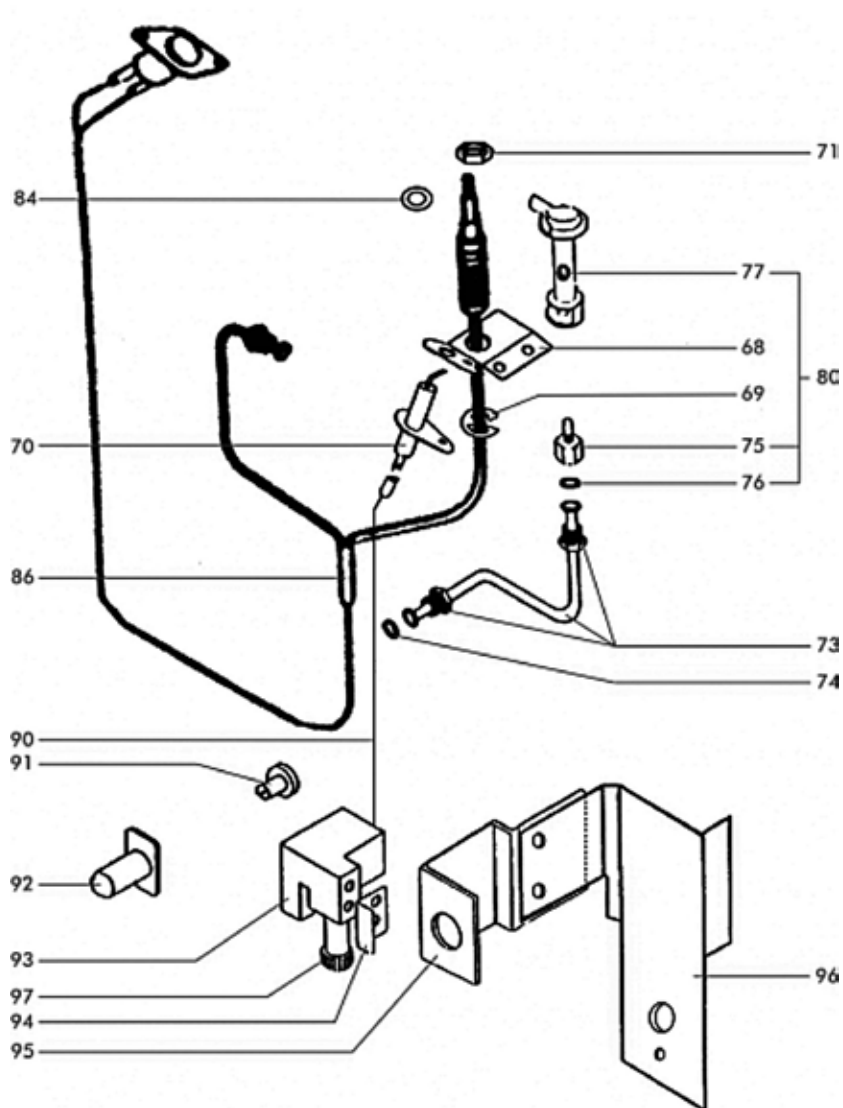

- 68 Pilot Bracket
- 69 Thermocouple Locking Nut /10Pk
- 70 Spark Electrode
- 71 Thermocouple Locking Nut /10Pk
- 73 Pilot Gas Pipe
- 74 Pilot Washer 10/Pack
- 75 Pilot Injector (LPG)
- 76 Pilot Washer 10/Pack
- 77 Pilot Burner
- 80 Pilot Assembly
- 86 D61B/E Thermocouple C/W Sensor
- 90 Spark Wire
- 91 Spark Button Insert
- 92 Spark Igniter Button
- 93 Spark Generator
- 94 Spark Generator Bracket
- 95 Spark Button Guide Bracket
- 96 Spark Assembly Mounting Bracket
- 97 Battery Cap


Morco D61B

External Components

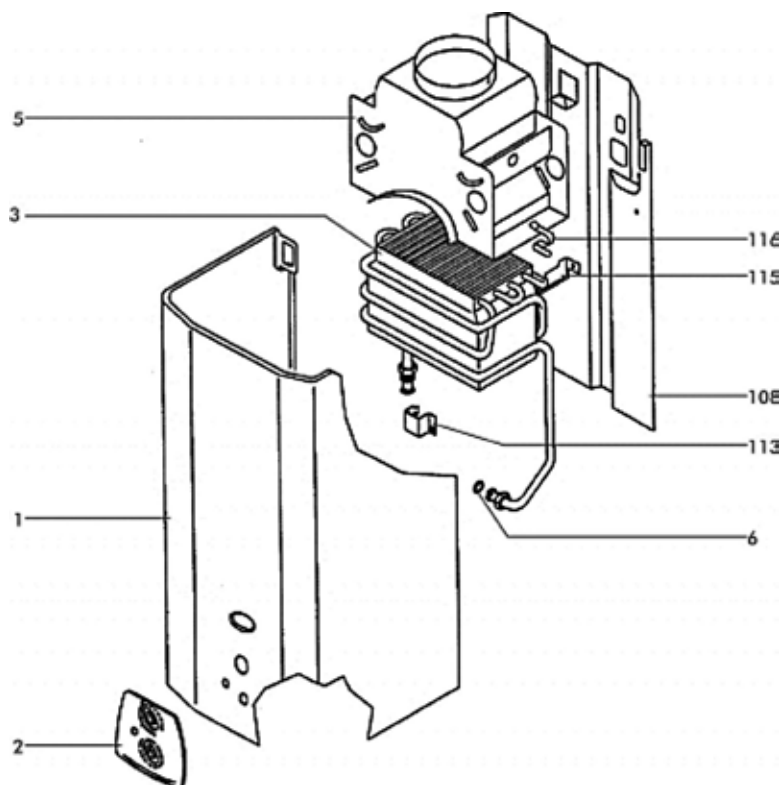


- 1 D61B Front Cover
- 2 Bezel (white)
- 3 D61B/E Heat Exchanger
- 5 Diverter Hood D61B & D61E
- 6 HEAT EXCHANGER WASHER 10PK
- 108 D61B/E Base
- 113 Fixing Clamp
- 116 Heat Exchanger Spring Clip


Morco D61B Gas Assembly

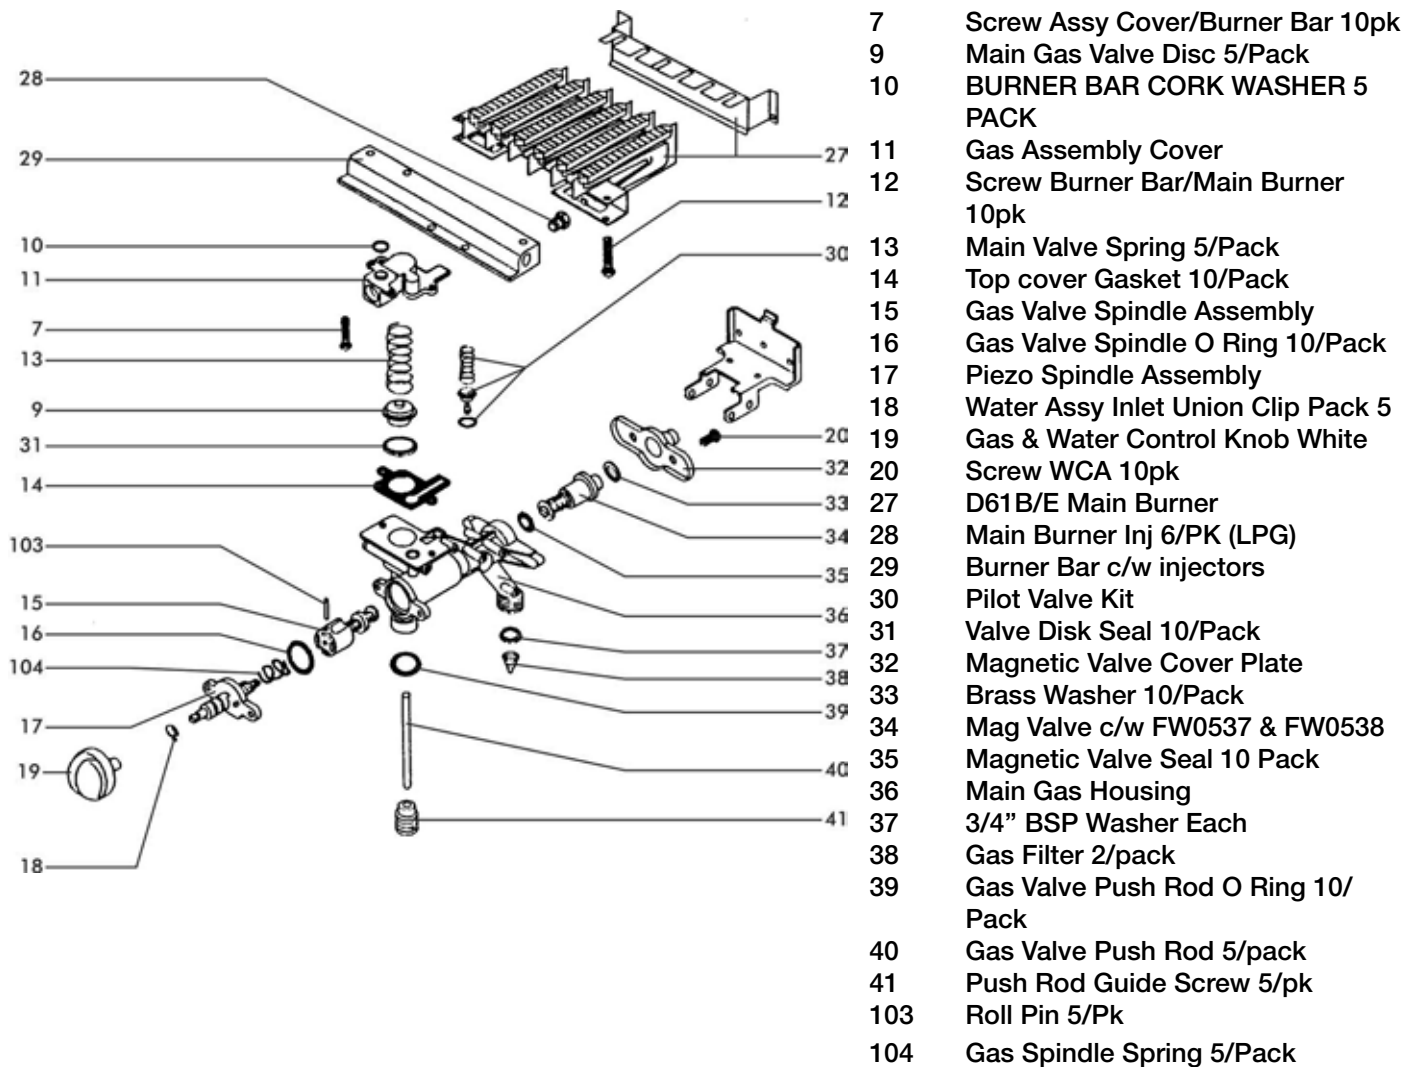

Morco D61B Water Control Assembly

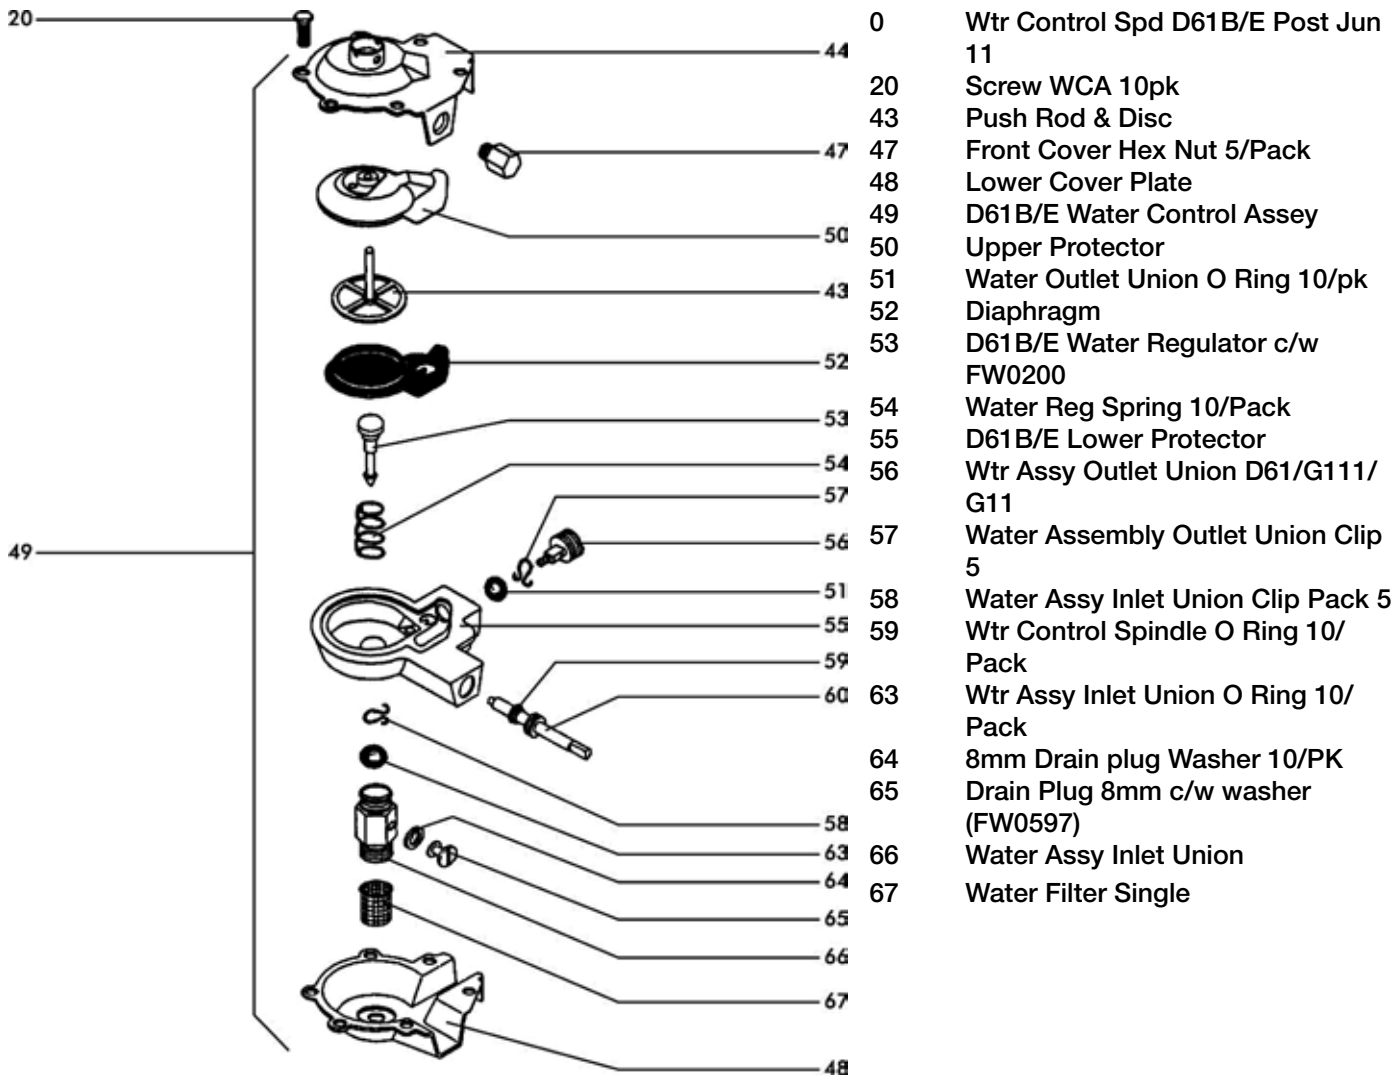

Morco D61B Pilot Assembly

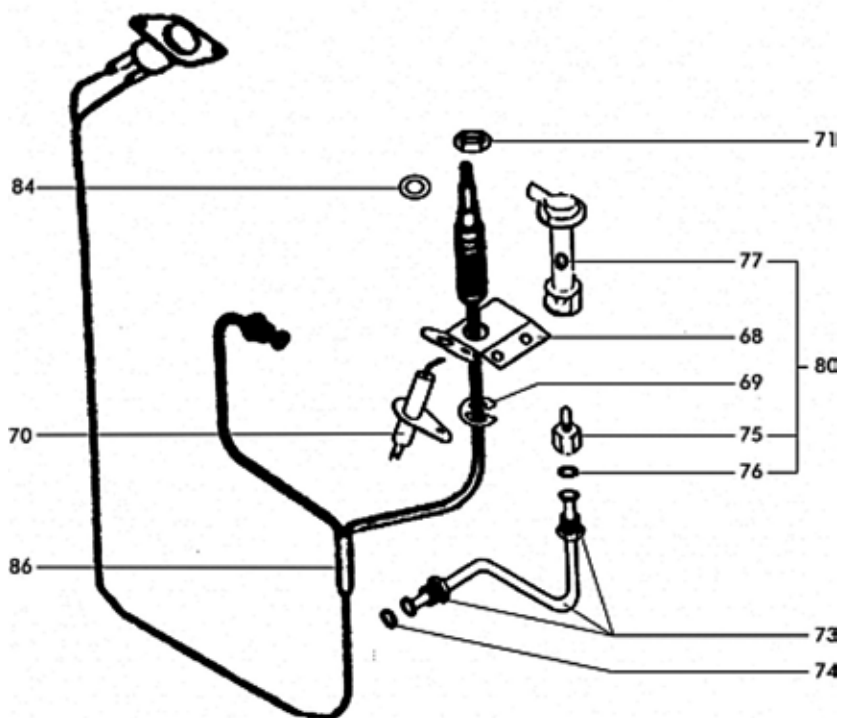

- 68 Pilot Bracket
- 69 Thermocouple Locking Nut /10Pk
- 70 Spark Electrode
- 71 Thermocouple Locking Nut /10Pk
- 73 Pilot Gas Pipe
- 74 Pilot Washer 10/Pack
- 75 Pilot Injector (LPG)
- 76 Pilot Washer 10/Pack
- 77 Pilot Burner
- 80 Pilot Assembly
- 86 D61B/E Thermocouple C/W Sensor